

Setting up Motion Detection on a Bosch Device

A major benefit of having the camera detect motion is that it reduces the amount of work the server had to do. It also increases the accuracy of motion detection. This document will walk through the basic steps of setting up Motion Detection on a Bosch camera.

These steps use a Bosch NBN-733V camera. The steps for other Bosch cameras might be different. For further assistance with setting up motion detection, please refer to the proper documentation from Bosch or contact their tech support.

DINION HD 720p IVA

LIVEPAGE | ► SETTINGS



Log into the camera, go to Setting and under Alarm select VCA. (1)

Select the VCA Configuration to use and Analysis Type of Motion+. The Alarm Status can be used to see when the alarm is being triggered. (2)

In the Motion Detector section adjust the Sensitivity, Minimum Object Size and the Area to detect motion in. (3)

Click Set to save the settings. (4)

Once complete, follow the steps in the document "How to Setup Camera Side Motion Detection and Recording."