
Setting up Motion Detection on a Sony Device

A major benefit of having the camera detect motion is that it reduces the amount of work the server had to do. It also increases the accuracy of motion detection. This document will walk through the basic steps of setting up Motion Detection on a Sony camera.

These steps use a Sony SNC-VB635 camera. The steps for other Sony cameras might be different. For further assistance with setting up motion detection on these cameras, please refer to the proper documentation from Sony or contact their tech support.

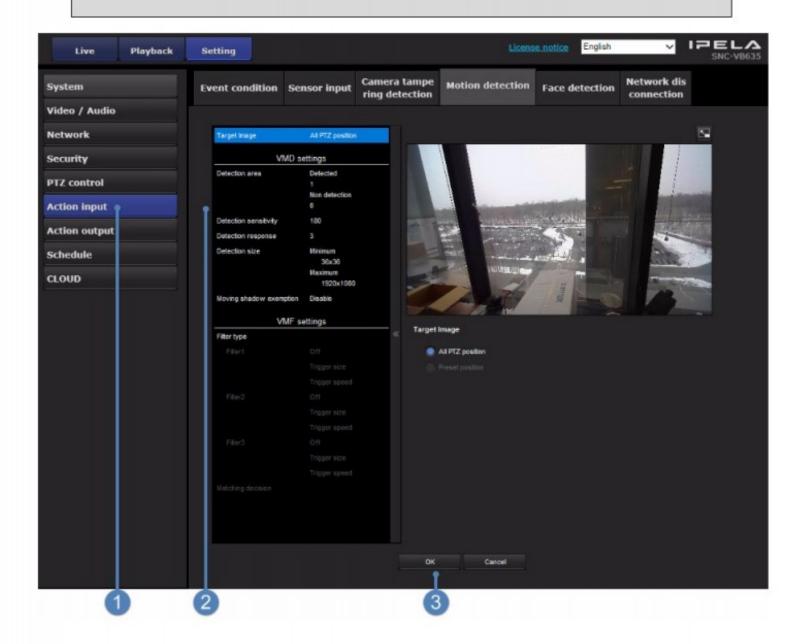

Log into the camera and got to Settings and under Action Input select the Motion Detection tab. (1)

Under VMD Settings, configure the Detection Area, Detection Sensitivity, and other settings as, needed. (2)

Click OK when finished to save the settings. (3)

Once complete, follow the steps in the document "How to Setup Camera Side Motion Detection and Recording."