



Setting up a Manual Button to trigger an Output

This document will walk through the steps to set up a trigger or Button in Ocularis Recorder that you can manually trigger from Ocularis Client.

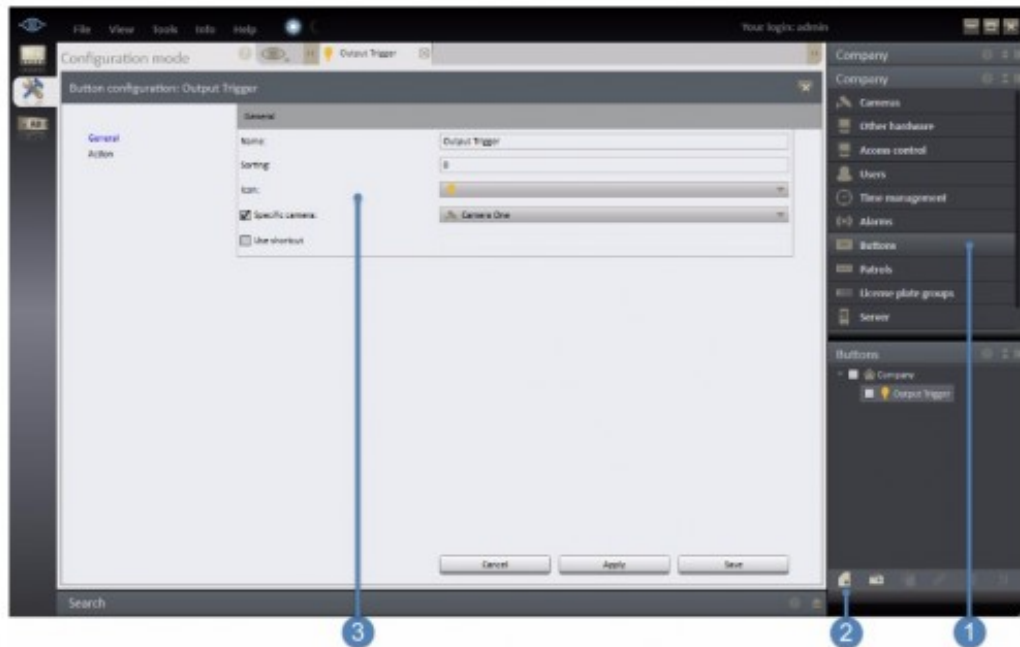

Click 'Buttons' (1) then click the 'Create new object' button to create a new button (2).

In the 'General' section (3) there are several parameters that can be configured. The two that are important are 'Name' where the name can be changed and 'Specific camera' where you select what camera will interact with this button.

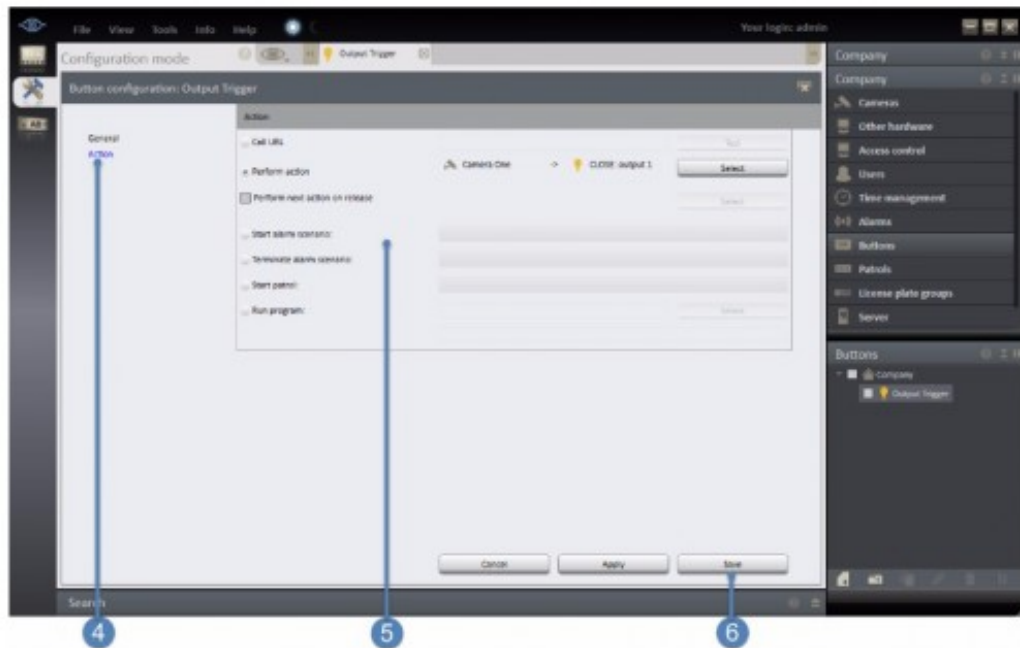

Select 'Action.' (4)

In the 'Action' section an action can be set that will occur when the Button is triggered inside Ocularis Client. These include triggering a camera action, starting a patrol or opening up an application on the client machine to name a few examples. (5)

Click 'Save' to save the settings and exit the Button configuration page. (6)

Log into Ocularis Client and under 'Triggers' you will find the manual button under 'Camera Triggers' and the camera associated with the Button back in step 3 above. It can be triggered by clicking the name given to the Button. (7)

